

Technical Bulletin

No. 208

APPLYING A NITROGEN BLANKET TO A T/R SET

Tools Required:

- Nitrogen Tank
- Pressure Regulator with Gauge
- 1/4" Quick Coupler (QC) Valve Actuator

Procedure:

1. Remove the protective cap from the 1/4" Quick Coupler Valve located of top of the T/R set.
2. Connect the hose from the regulator/gauge on the nitrogen tank to the 1/4" Quick Coupler Valve Actuator.
3. Screw the Valve Actuator into the access valve on top of the T/R set.
4. Pressurize the tank to 4 psig and let stand a couple of minutes. Close the valve on the top of the nitrogen tank and vent the T/R tank by pulling on the cap of the pressure relief valve.
5. Repeat this pressurization and venting process 3 times.
6. The T/R headspace pressure should be at 0.5 psig when completed.
7. Remove the Quick Coupler Valve Actuator from the access valve on top of the T/R set and replace the protective cap.