PCAMS for Windows NT

Alarm Program Documentation

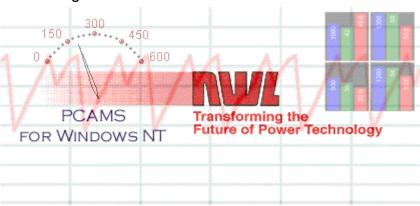


Table of Contents


ALARM OVERVIEW	3
VIEWING ALARMS	4
ACKNOWLEDGING ALARMS	5
PRINTING ALARMS	6
E-MAIL	7

Alarm Overview

Alarm allows you view all types of alarms, the date and time of their occurance and their status. You can customize your view to display only certain alarm types and set the number of days to maintain alarm data.

Viewing alarms

 The list box on the main Alarm screen displays all the alarms of types youhave selected to display. You can customize this list to only display alarms of certain types.

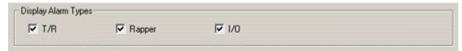

Select all types that you wish to view.

Acknowledging alarms


You can acknowledge individual alarms by double-clicking on them. You willnotice their state change to acknowledged. To change the state of all alarmscurrently being viewed to acknowledged, click on "Acknowledge All."

Printing alarms

You may want to make a hardcopy of the alarms. To print all the alarmscurrently being viewed, select "Print Display" from the "File" pulldown menu. Toprint all alarms, select "Print All" from the "File" pulldown menu.

E-Mail

Alarm can be configured to send an e-mail message when a number of alarmsoccur. To setup this function, select "E-Mail" from the "Setup" pulldown menu. The E-Mail Setup window will appear.

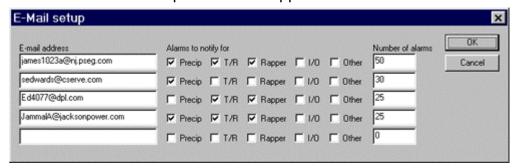

Alarm will support up to five people who can be notified of alarms throughe-mail. Enter the complete internet e-mail address in the edit box to the leftand check off all alarms you wish to receive notification for. Then enter thenumber of alarms that must occur before Alarm will notify you through e-mail. When you have finished, click OK.